

product
catalogue

express
yourself!





suburban icon = blank canvas

A new trend is sweeping through the manicured streets of suburbia, transforming garbage collection day into a colourful spectacle where whole neighbourhoods go on show!

Wheeliedesigns.com is an Australian company that designs a unique and contemporary range of vinyl stickers for wheelie bins. Wheeliedesigns are an affordable gift, perfect for special occasions, housewarmings or random fun!

Our product range includes;

- Full front panel bin stickers in 240 L and 120 L size
- House Numbers



wheeliedesigns.com®





natural



Zen Garden 1001



Bali Delight 1002



Lush 1003



Ginger Spice 1004



Frangipani Fantasy 1005




Lazy Days 1006





quirky!

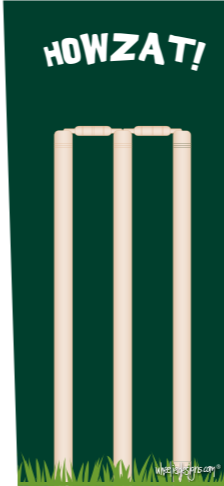

Howzat! 1007



Save Water 1008



Bachelor Bin 1009



Hangover Bin 1010



Gone Fishing 1011



Wheelie Bin? 1012



fun



Pimp My Trash 1013



Home Sweet Home 1014



Creepy Crawlies 1015



Hokey Pokey 1016



Life's A Garden 1017



Trashed 1018





arty



Samsara 1019



Pretty In Pink 1020



Jester 1021



Mexican Inca 1022



Recycle Warhol 1023



Warhol Waste Policy 1024

31

← actual size



house numbers



Wheeledesigns.com also sell house number stickers which are pre-cut numbers. Numbers are sold individually for complete customisation.

These white vinyl numbers come in a standard size to be placed on top of any of our designs, or they can be used on their own – even on other surfaces like your letterbox!

General Info!

What size are they?

There are 2 sizes of wheeliedesigns available, designed to fit either the front or side of a standard large 240L and small 120L-140L council wheelie bin.

- 240L size is 820mm high x 400mm wide (tapering to 350mm at base of panel)
- 120L size is 695mm high x 337mm wide (tapering to 300mm at base of panel)
- Number stickers are 100mm high x up to 70mm wide



What are they made from?

Wheeliedesigns.com images are high resolution graphics digitally printed on self-adhesive vinyl.

How long will they last?

The designs are UV fade resistant in outdoor use for up to 3 years. They are waterproof, easy to apply and remove when you want to change!

Are they easy to apply?

Of course they are! All Wheeliedesigns come with an easy installation instruction sheet.

What if I don't own my wheelie bin?

Our stickers are easy to remove and won't damage the wheelie bin.

Feedback

"What great service!....can't wait until next week when the bins are emptied & everyone in the street gets to look at my new designer bins!! They look AWESOME!!"
Fiona, Victoria

"I love bin days. I now have the most stylish bin in my street."
Monica, Queensland

"Brilliant"
Giftrap Magazine March/April 2009

"Cheap & Clever!"
Voyeur Magazine January 2009



How to apply a wheelie cool bin sticker

What you'll need...

- Cloth, wet & dry
- Bowl of soapy water
- Credit card
- Your brand new Wheeliedesign!



Hints!

If your Wheeliedesign gets dirty, simply wipe it clean with a damp cloth.



If you are placing your Wheeliedesign on the side of your Wheelie Bin, you may need to cut the sticker before applying to the bin.

Applying the sticker in daylight will help you see any air bubbles.

Steps

- 1** Clean and dry the surface you plan on placing the sticker.
- 2** Wet the surface where you plan on placing the sticker, with soapy water. This helps maneuver the sticker into place. If the surface is too dry, the sticker will immediately stick to the bin and you will not be able to reposition.
- 3** Visually position the sticker in the desired location. Remove approx. 10cm of the backing paper evenly across the top and lightly apply the exposed sticker to the bin's surface. Stand back and check if it is level (if not remove the sticker and reposition).
- 4** Once the sticker is applied to the top, remove the backing paper entirely. Firmly hold the base of the sticker with one hand slightly out from the bin so the adhesive is not yet touching. Wrap a cloth around your plastic credit card and using the soft covered edge, apply even pressure scraping left to right continuing downwards until the decal is fully applied from top to bottom.
- 5** IMPORTANT! Scrape all air bubbles out to the nearest exposed edge and squeeze out any excess water.
- 6** Proudly park your new Wheeliedesign bin in the street next bin day!



PO Box 1087 Airlie Beach
Whitsundays Qld Australia 4802
1300 559 008
ph +61 7 4948 2400
fax +61 7 4948 2058
info@wheeliedesigns.com

wheeliedesigns.com®